


MAR-2181

An in-wall PIR switch with a square faceplate for automatic room and circulation lighting.



INSTALLATION ARRANGEMENT

NTS - NOT TO SCALE

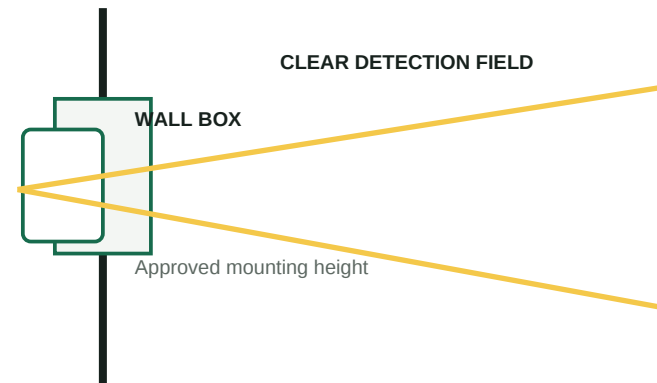

VERIFIED PRODUCT DATA

SENSOR TYPE	Passive infrared (PIR)
INSTALLATION	In-wall switch format
CONFIGURATION	Project-specific; confirm before ordering

INSTALLATION SEQUENCE

- 1 Isolate the circuit and verify wall-box, voltage, load type and wiring variant.
- 2 Mark the approved mounting height and keep the lens clear of doors, heat and airflow.
- 3 Terminate conductors only to the approved model-specific terminal diagram.
- 4 Fit the faceplate, restore power and test daylight, delay and detection settings.

INSTALLER CHECK

Use the approved production wiring and dimensional drawing before cutting or energizing.